


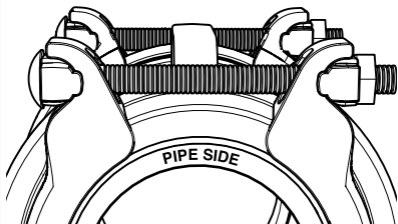

# MACRO™ LR GASKET

When installing LR Gasket:

- Make sure the gasket is properly seated and that the PIPE SIDE marking is facing out.
- If the gasket is stiff and difficult to install, you can gently tap with a hammer (along the top outside edge at a 45° angle) until the gasket is in place. Take care not to damage the coupling, coatings or gasket.



For more information, visit [www.romac.com](http://www.romac.com)

 **ROMAC**  
INDUSTRIES, INC.

1.800.426.9341  
[www.romac.com](http://www.romac.com)